



# Acer Aspire E1-571 - DVD Drive Replacement

Acer Aspire E1-571 - DVD Drive Replacement

Written By: ZFix



## INTRODUCTION

How to replace DVD optical drive.

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/SZKOM87Ho78>]

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — DVD Drive



- Unscrew one screw M 2.5x8.0 to free the DVD drive

## Step 2



- Use plastic tool to eject the DVD drive.
- **Did you do it successfully?**
- .

 [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.

